


COOKE™
&LEWIS

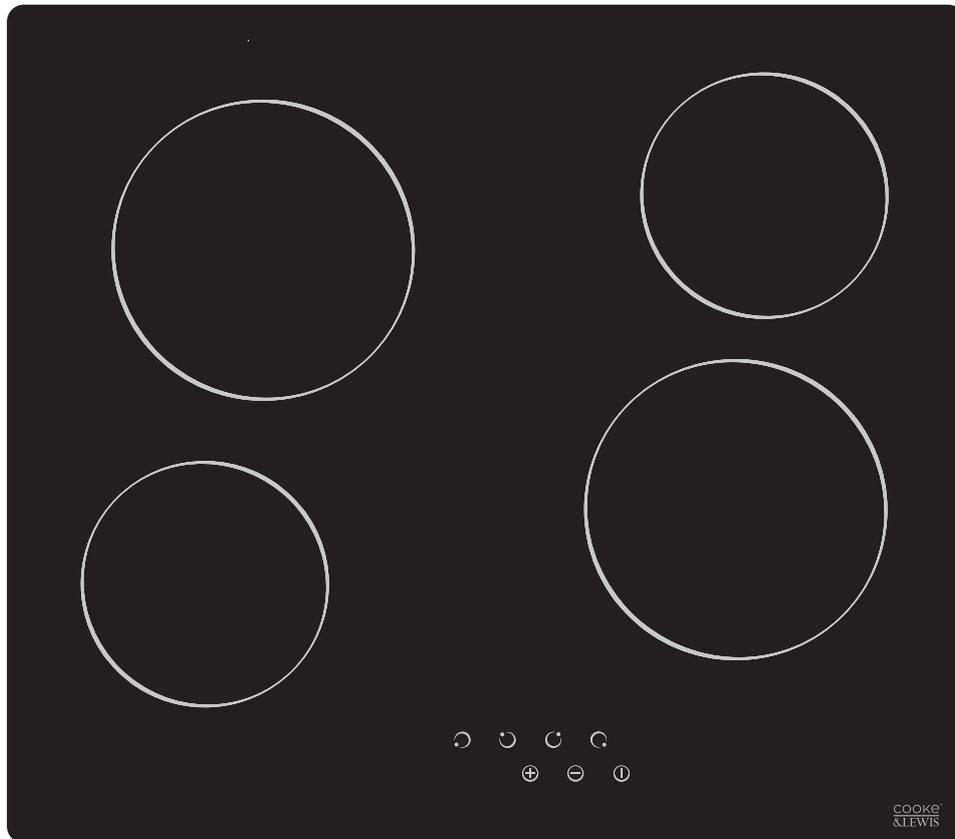

CLCER60 3663602842255



EN Use

RO Utilizare

FR Utilisation

ES Uso

PL Użytkowanie

PT Utilização

DE Benutzung

TR Kullanım

RUS Использование

Before you start

When the power is switched on at the switched fused spur, the buzzer will sound once, three zeroes will be displayed briefly on the control panel and go off. The appliance is ready for use.



CAUTION: When the ON/OFF key (D) is pressed for three seconds, the ceramic hob returns to off mode if no other operation is carried out within 20 seconds.

Function & Settings

Protection from over-heating

When the built-in sensor detects an excessive temperature, the hob will be switched off automatically.

Residual heat indicator

WARNING: The display will show the letter “H” to indicate that the appliance is too hot to touch.

Auto shutdown

If you forget to switch off a cooking zone, the appliance will automatically shutdown after a certain time.

The default shutdown times are shown in the table below:

Power level	The heating zone shuts down automatically after
1-2	6 hours
3-4	5 hours
5	4 hours
6-9	90 minutes

Protection against unintended operation.

If a button is held down for ten seconds the appliance will sound a beep and display the error code ER03. This will continue until the button is released.

	Reference	Description
	A	Zone position
	B	Reduce power output
	C	Increase power output
	D	ON / OFF

01 Heating zone operation

When the ON/OFF key “” is pressed, all the indicators show “0.”

1. Select the cooking zone you wish to use by pressing the “” key (A). The “0” symbol selected will stay fully lit. All other zone indicators will dim.
2. Select the power level by pressing the “+” key (C) “” or “-” key (B) “”
3. The power level will start at “0”. Pressing the “+” will count up the power levels from 0 to 9 (max power) in numerical order. Pressing the “-” key will take the power straight from 0 to 9. Pressing the “-” key again will decrease the power level.
4. The zone button “A” and “H” will flash alternately for 20 seconds when the power is reduced to zero.
5. The display will have a residual heat warning of “H” until the cooking zone has cooled to a safe level.
6. To reuse the same cooking zone again, please follow the above steps.

Heating Zone	Max. Power (230V~)
	1800 W
	1200 W
	1800 W
	1200 W

02 Safety mode (Child lock)

To ensure the safety of children, the ceramic hob is fitted with an interlock device.

1. If one or more cooking zones are in use the child lock cannot be activated.
2. Please ensure that all of the cooking zones are in standby mode. Simultaneously press the “-” key and the furthest left zone selection key. The hob emits a beep and all keys should be released. At this point pressing the furthest left zone selection key once more will activate the child lock and L. will be shown in all 4 display windows.
3. In child lock mode, all keys are locked except the on/off key. No cooking zones can be activated. The appliance can only be switched on and off.

4. The child lock can be deactivated temporarily. Press the on/off key to enter the off mode. Then press on/off key again to enter standby mode. Simultaneously press the “–” key and the furthest left zone activation key. The child lock will be switched off temporarily. It will not be shown during this operation but it will reactivate the next time the hob is switched on.
 5. The child lock can be permanently deactivated. Press on/off key to enter the off mode. Then press on/off key again to enter standby mode. Simultaneously press the “–” key and furthest left zone selection key. The hob will emit a beep and all keys should be released. At this point pressing the “–” key again will deactivate the child lock function.
-



EN Care & maintenance
 PL Pielęgnacja i konserwacja
 RUС Уход и обслуживание
 ES Cuidados y Mantenimiento
 TR Bakım ve Onarım

FR Entretien et maintenance
 DE Pflege und Wartung
 RO Îngrijire și întreținere
 PT Cuidados e manutenção



WARNING: Always switch off the electricity supply before performing maintenance work. In the event of a fault, contact customer services.



Damaged power cables should be replaced by a competent person or qualified electrician.



For domestic use only.



Never place an empty pan on the hob as this will cause the overheat sensor to switch off the appliance automatically.



When a cooking zone has been on for a long time, the surface remains hot and shows “H” in the display.



If the surface of the hob becomes cracked, do not use, switch off the appliance at the fused spur and contact customer services.



Do not place rough or uneven vessels on the hob, as they could damage the glass surface.



Avoid banging pots and pans down on the hob. The ceramic surface is tough but not unbreakable.



Do not put detergents or flammable materials beneath the hob.



- The appliance should be cleaned after use, allow to cool first!
- The surface of the ceramic hob should be cleaned as follows:

Type of dirt	Cleaning method	Cleaning materials
Limescale	Apply white vinegar to the surface, then wipe it dry with soft cloth	Special ceramic cleaner
Burnt-on stains	Clean with damp cloth and dry it with a soft cloth	Special ceramic cleaner
Light stains	Clean with damp cloth and dry it with a soft cloth	Cleaning sponge
Melted plastics	Use a scraper suitable for ceramic glass to remove residue	Special ceramic cleaner



CAUTION: Avoid rubbing with any abrasive or with the base of the pans, etc, as this will wear the markings on the top of the ceramic hob over time.

- Clean the ceramic hob on a regular basis to prevent the build up of food residue.

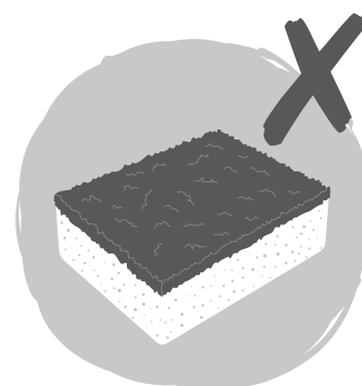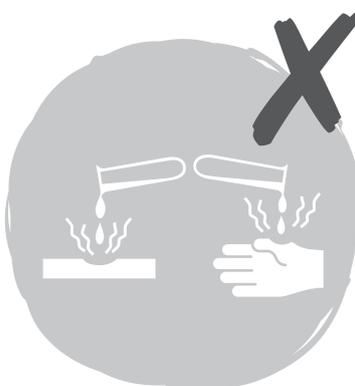

Never use:

- Undiluted washing-up liquid
- Detergent intended for dishwashers
- Scouring agents
- Harsh cleaning agents such as oven spray or stain remover
- Abrasive sponges
- High-pressure cleaners or steam jet cleaners

Customer helpline (toll free):

UK 0800 324 7818 uk@kingfisherservice.com

Eire 1800 932 230 eire@kingfisherservice.com